



Zodiac® Easy Connect

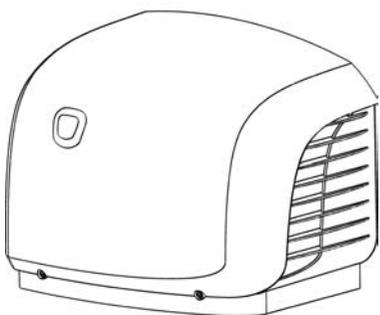








Instructions for installation and use
English







EN

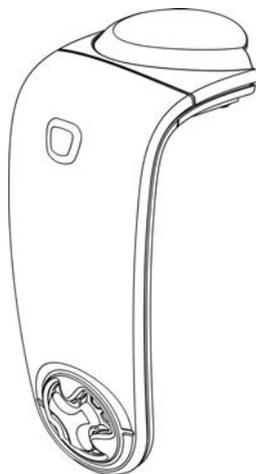

More documents on:
www.zodiac.com



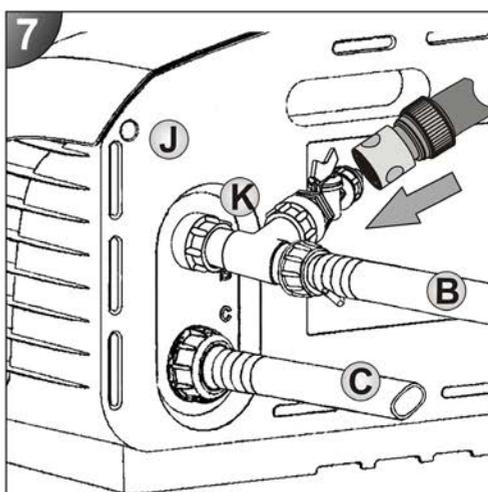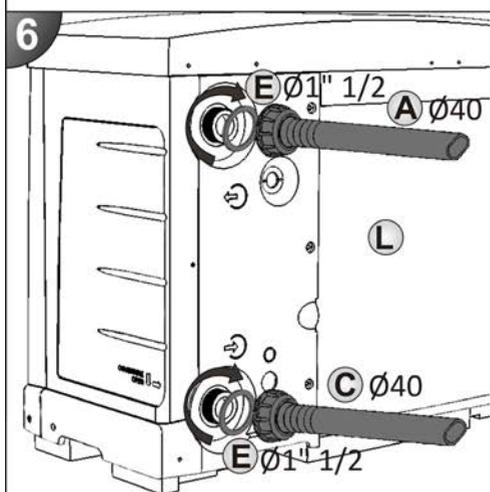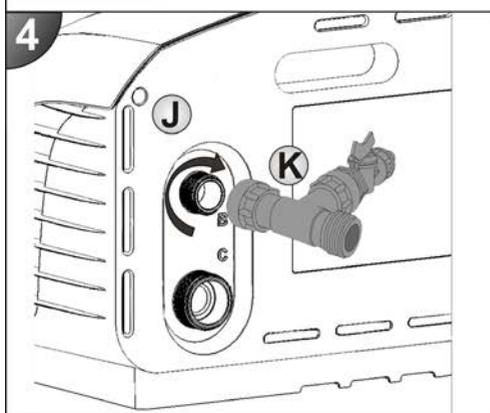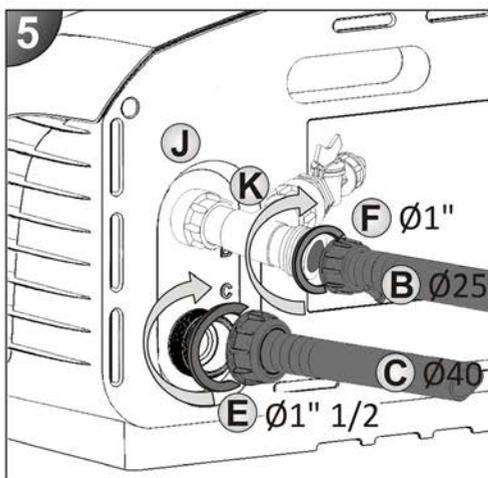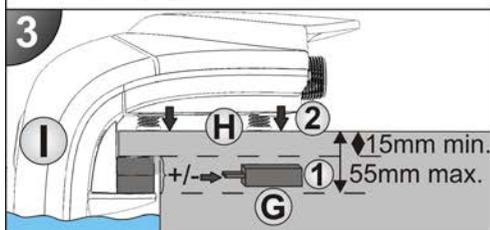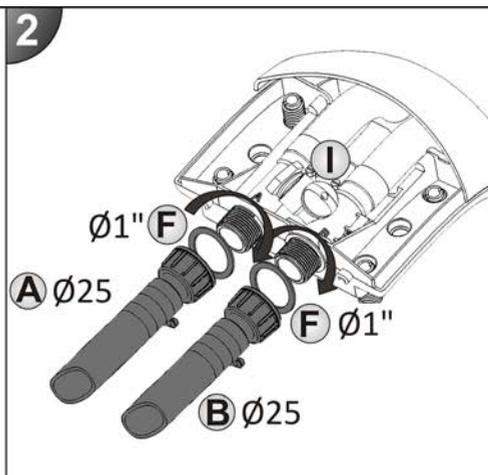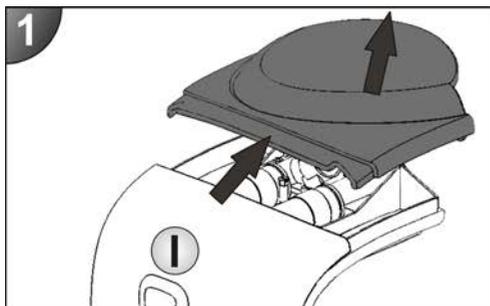

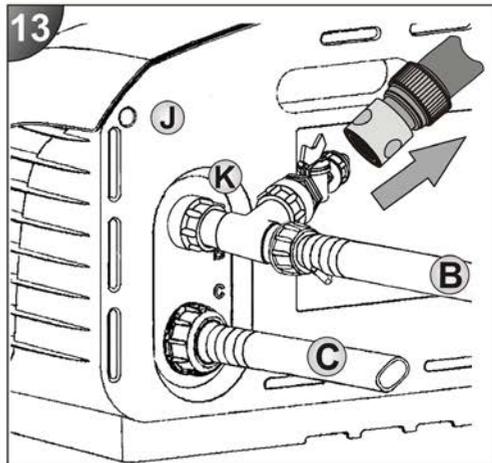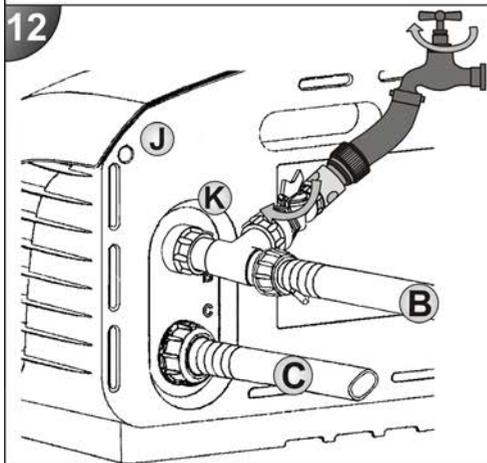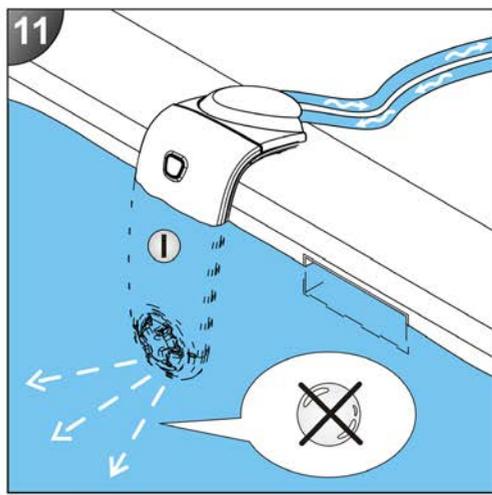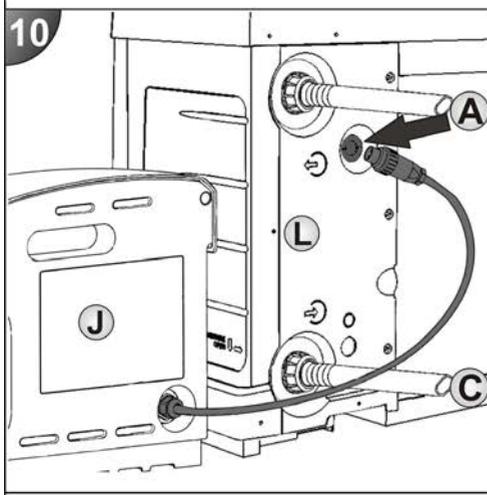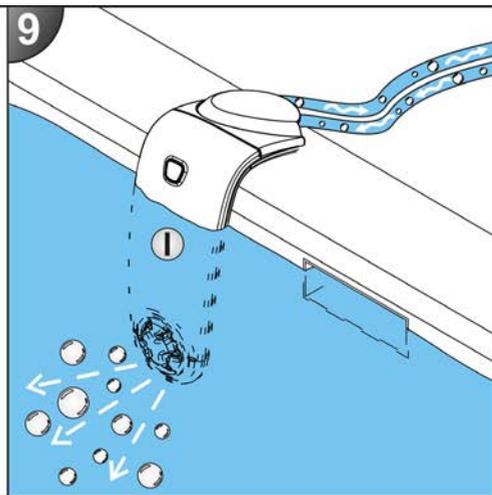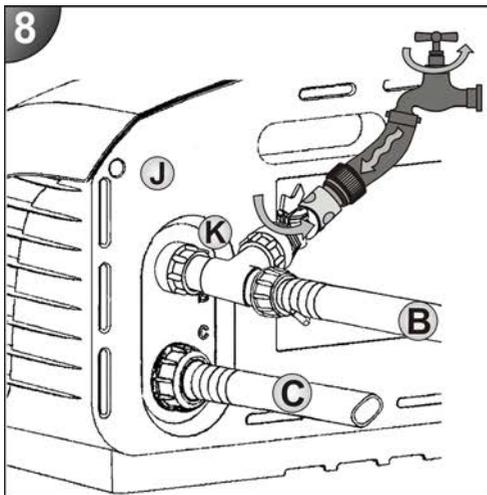

- Read this notice carefully before installing, maintaining or repairing this appliance!
- The symbol  indicates important information that you must take into account to avoid the risk of damage to persons or the appliance.
- The symbol  indicates useful information as an indication.



Warnings

- Our products may be subject to change without notice as part of our continuous improvement policy.
- Exclusive use: pool water circulating pump for Zodiac® Power or Z200 (must not be used for any other purpose).
- The device must be installed by a qualified technician according to the manufacturer's instructions and in compliance with local regulations. The installer is responsible for the correct installation of the device and for ensuring compliance with local regulations. The manufacturer shall not be held liable for any potential issues that may occur as a result of failure to comply with local standards pertaining to installation.
- This appliance must be handled by competent and qualified personnel (physically and mentally) who are familiar with the operating instructions (by reading the user guide). Persons who do not satisfy these requirements must not handle the device so as to avoid exposure to potentially dangerous parts.
- If the device malfunctions: do not attempt to repair the device yourself, call your retailer.
- Before reconnecting any component, check that the voltage indicated on the device corresponds to the mains voltage.
- Before carrying out any operation on the machine, check that the power supply is cut and that the machine is tagged out.
- The power supply cable and hoses must be isolated from any sharp or hot component which could damage or crush the former. If these elements are damaged, they must be replaced by a qualified technician.
- If any safety device is removed or shunted, the warranty will automatically be void. This will also apply if parts are replaced with parts acquired elsewhere than our stores.
- The pump should be placed in a location that is not at risk of flooding,
- Incorrect installation may cause serious damage and/or personal injuries (possibly death).
- Keep the device out of the reach of children.
- Do not leave the device in water during chlorine shock treatment.
- Do not step on the device or hoses.
- Risk of electric shock inside the device.
- The addition of chemicals to the system is formally prohibited.




1. Installation and connections



Check the direction of the pipework connection (see installation procedure). Extending or shortening the hoses or using other hoses is prohibited. Check the tightening of the hydraulic connections, and the presence of the joints for no leaks. Only fill the hydraulic system using pool water or tap water.

- You are recommended to fix the head (I) on the end of the pool (15 mm minimum, 55 mm maximum of end height) to ensure stability. Use the holes in the adjustment bases to fit the screws (not supplied),
- Adjust the direction of the head (I) using the wedges (G) and adjustment bases (H) provided (see image 3). The adjustment bases (H) can be positioned in the 6 slots provided,
- It is possible to fix the hose attachments (D) to the ground (brackets not included).
- To keep an optimum flow rate there must not be a difference in level of more than 1.5 meters between the head (I) and the «pump box» (J)

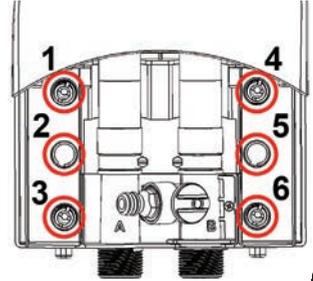

EN

2. Starting the device

- Check that the suction nozzle of the head (I) is not blocked,




Check this aspect regularly, the nozzle may be blocked.

- Prime the hydraulic system (see procedures/images 7 - 11),
- Start the heat pump (L) (refer to the heat pump manual for first run and display),
- This pump will automatically detect the connection of the “pump box” (J), and the indicator



will light up:

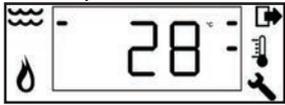

- Set the required water temperature,
- Once the heat pump has started up, cut the water intake, shut valve (K) and disconnect the filling hose (refer to images 12 and 13).



A time-delay of a few minutes may be applied for the heat pump at power-up. The device may operate during bathing, and the use of the cleaning robot, however, clean the wall behind the head on a regular basis. If a roller cover is used for the pool, adapt the cover to the positioning of the head (I), or remove when closing the roller cover.

3. Winter storage



Winter storage is essential, otherwise the pump, hoses and head could freeze. This case is not covered by the warranty.

- Remove the head (I) from the pool,
- Drain the head (I), hoses (A, B & C) and the “pump box” (J),
- Store in a room which remains above freezing.

4. Recycling



This symbol means that your appliance must not be disposed of as household waste. It will be subject to selective waste sorting with a view to its reuse, recycling or sale. If it contains substances that are potentially harmful to the environment, they will be eliminated or neutralised.

Ask your reseller for information about recycling.

5. Registering the product

Register your product on our website: **www.zodiac.com**



- be the first to be informed of new Zodiac® products and special offers,
- help us to constantly improve our product quality.



www.zodiac.com

Pour plus de renseignements, merci de contacter votre revendeur.
For further information, please contact your retailer.

ZODIAC® is a registered trademark of Zodiac International, S.A.S.U., used under license.



Avec Ecofolio
tous les papiers
se recyclent.

Votre revendeur / your retailer